

1/16 & 1/32 DIN TEMPERATURE CONTROLLER MANUAL (59423-2)

MECHANICAL INSTALLATION

The Controllers are designed to be mounted either in a 1/16 or a 1/32 DIN panel cutout. The units are sleeve mounted with the front bezel assembly rated NEMA4/IP66 provided that:

- the panel is smooth and the panel cutout is accurate;
- the mounting instructions are carefully followed.

DIN PANEL CUTOUT

1/16 DIN: 45.0mm +0.6 / 0.0 wide, 45.0mm +0.6 / 0.0 high

1/32 DIN: 45.0mm +0.6 / -0 wide, 22.2mm +0.3 / -0 high

Maximum panel thickness 9.5mm

Minimum spacing 20mm vertical, 10mm horizontal

MOUNTING

To mount a Controller proceed as follows:

- 1 Check that the controller is correctly orientated and then slide the unit into the cutout.
- 2 Slide the panel clamp over the controller sleeve pressing it firmly against the panel until the controller is held firmly.
- 3 The controller front bezel and circuit board assembly can be unplugged from the sleeve. Grasp the bezel firmly by the recesses on each side and pull. A screwdriver can be used as a lever if required.
- 4 When refitting the bezel assembly it is important to press it firmly into the sleeve until the latch clicks in order to compress the gasket and seal to NEMA4/IP66.

CLEANING

Wipe down with damp cloth (water only)

Note: The controller should be isolated before removing or refitting it in the sleeve, and electrostatic precautions should be observed when handling the controller outside the sleeve.

DIMENSIONS: MODELS

Model	Bezel*		Behind panel		Overall length	Behind panel length*
	Width	Height	Width	Height		
1/32 DIN - 48 x 24mm	51.0	28.5	44.8	22.0	116.2	106.7
1/16 DIN - 48 x 48mm	51.0	51.0	44.8	44.8	116.2	106.7

Dimensions in mm
* includes gasket

ELECTRICAL INSTALLATION (Also see important Safety Information)

OUTPUT DEVICES

Two of the following output devices are fitted to the controllers, depending on the model.

- 1 Solid state relay drive (SSd/SSd1/SSd2) 5Vdc +/-15%, 15mA non isolating. To switch a remote SSR (or logic)
- 2 Miniature power relay (rLY/rLY1) 2A/250V AC resistive, Form A/SPST contacts.
- 3 Sub miniature power relay (rLY2) 1A/250V AC resistive, Form A/SPST contacts.

OUTPUT DEVICE ALLOCATION

Any of the available outputs may be chosen for the main setpoint (SP1), the remaining device being automatically allocated to the second setpoint (SP2).

Dual relay or dual SSd output models are available to order. Please contact your local distributor for details.

Designed for use with the following supply voltages:

- 1). 100 - 240V 50-60 Hz 4.5 VA (nominal) +/-10% maximum permitted fluctuation
- 2). 12V - 24V (AC/DC) +/-20% 4.5 VA Polarity not required

WIRING THE CONNECTOR

Prepare the cable carefully, remove a maximum of 8mm insulation and ideally tin to avoid bridging. Prevent excessive cable strain. Maximum recommended wire size: 32/0.2mm 1.0mm²(18AWG).

INDUCTIVE LOADS

To prolong relay contact life and suppress interference it is recommended engineering practice to fit a snubber (0.1uf/100 ohms) between terminals 5 and 6.

CAUTION:Snubber leakage current can cause some electro-mechanical devices to be held ON. Check with the manufacturers specifications.

EN61010 - /CSA 22.2 No 1010.1 92

- Compliance shall not be impaired when fitted to the final installation.
- Designed to offer a minimum of Basic Insulation only.
- The body responsible for the installation is to ensure that supplementary insulation suitable for Installation Category II or III is achieved when fully installed.
- To avoid possible hazards, accessible conductive parts of the final installation should be protectively earthed in accordance with EN61010 for Class 1 Equipment.
- Output wiring should be within a Protectively Earthed cabinet.
- Sensor sheaths should be bonded to protective earth or not be accessible.
- Live parts should not be accessible without the use of a tool.
- When fitted to the final installation, an IEC/CSA APPROVED disconnecting device should be used to disconnect both LINE and NEUTRAL conductors simultaneously.
- A clear instruction shall be provided not to position the equipment so that it is difficult to operate the disconnecting device.

SENSOR SELECTION

Thermocouples	Description	Sensor Range	Linearity
tC b	Pt-30% Rh/Pt-6%Rh	0 to 1800°C	2.0*
tC E	Chromel/Con	0 to 600°C	0.5
tC J	Iron/Constantan	0 to 800°C	0.5
tC K	Chromel/Alumel	-50 to 1200°C	0.25*
tC L	Fe/Konst	0 to 800°C	0.5
tC n	NiCrSi/NiSi	-50 to 1200°C	0.25*
tC r	Pt-13% Rh/Pt	0 to 1600°C	2.0*
tC s	Pt-10% Rh/Pt	0 to 1600°C	2.0*
tC t	Copper/Con	-200 to 250°C	0.25
Resistance Thermometer RTD	Pt100/RTD-2	-200 to 400°C	0.25*

Linear process inputs (Input mV range: 0 to 50mV)

Displays 0 - 20mV / 20mV setpoint limits

Lin1 0 - 100 0 - 400 ± 0.5%

Lin2 0 - 100 -25 - 400 ± 0.5%

Lin3 0 - 1000 0 - 3000 ± 0.5%

Lin4 0 - 1000 -250 - 3000 ± 0.5%


Lin5 0 - 2000 0 - 3000 ± 0.5%

Notes: 1 Linearity: 9.5% sensor range

2 * Linearity: B.5° (70° - 500°C) K/N:1° >350°C exceptions: R/S: 5°<300°C T:1° <-25° >150°C

RTD/PT100: 0.5° <-100°C

CONNECTION DIAGRAM

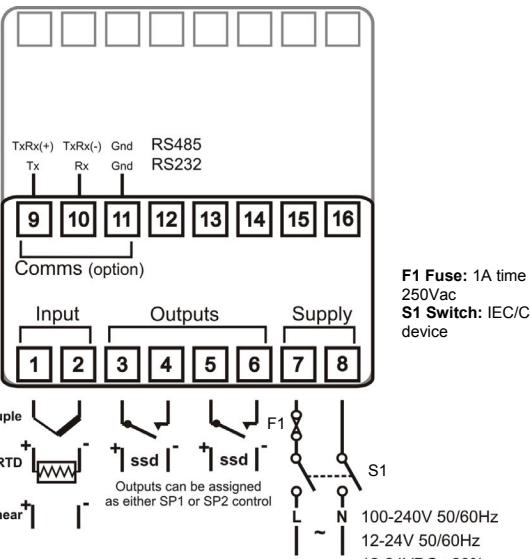

F1 Fuse: 1A time lag type to IEC127. CSA/UL rating 250Vac
S1 Switch: IEC/CSA/UL Approved disconnecting device

SAFETY INFORMATION



INSTALLATION

Designed for use:

UL873 - only in products where the acceptability is determined by Underwriters Laboratories Inc. EN61010-1 / CSA 22.2 No 1010.1 - 92

To offer a minimum of Basic Insulation only.

Suitable for installation within Category II and III and Pollution Degree 2.

SEE ELECTRICAL INSTALLATION It is the responsibility of the installation engineer to ensure this equipment is installed as specified in this manual and is in compliance with appropriate wiring regulations.

CONFIGURATION

All functions are front selectable, it is the responsibility of the installing engineer to ensure that the configuration is safe. Use the program lock to protect critical functions from tampering.

ULTIMATE SAFETY ALARMS

Do not use SP2 as the sole alarm where personal injury or damage may be caused by equipment failure.

INSTRUMENT PANEL FEATURES



Green Display: Process temperature or program Function/Option

Orange Display: Setpoint temperature or program Option (Dual Display only)

Green LED: Setpoint 1 output indicator

Red/Orange LED: Setpoint 2 output indicator

ADJUSTMENTS

To enter or exit **program mode**: Press **▲▼** together for 3 seconds

To scroll through **functions**: Press **▲** or **▼**

To change **levels or options**: Press *** ▲** together or *** ▼** together

To view setpoint: Press *****

To increase setpoint: Press *** ▲** together

To decrease setpoint: Press *** ▼** together

To reset an alarm or fault condition: Press **▲▼** together briefly

Notes: If in difficulty by becoming "lost" in program mode, press **▲** and **▼** together for 3 seconds to return to display mode, check the INSTRUMENT ADJUSTMENTS above and try again.

When in program mode, after 60 seconds of key inactivity the display will revert to either **inPt : none** or, if the initial configuration has been completed, the measured value. Any settings already completed will be retained.

GETTING STARTED

After power-up the controller requires programming with the following information:

- Type of Sensor
- Operating unit
- Allocation of Output Device to SP1/SP2 (Relay or SSd)
- Temperature Setpoint

When the above information has been programmed into the controller it will be operational with the following factory settings.

Proportional band/Gain 10°C/18°F

Integral time/Reset 5 mins

Derivative time/Rate 25 secs

Proportional cycle-time 20 secs (Typical setting for relay output)

DAC Derivative approach control 1.5 (Average setting for minimum overshoot)

NOTE: The instruments covered in this manual may be fitted with either a single or a dual display. Where a single display shows more than one reading, it will alternate between them.

INITIAL SET-UP

On power-up the controller will display the self test sequence followed by the initial display **inPt : none**

1 Select input sensor.

- Press and hold ***** and use the **▲** or **▼** buttons to scroll through the sensor selection list until the correct sensor is displayed. Release the buttons. The display will now read selected sensor type e.g. **inPt : tCs**

2 Select unit.

- Press and hold ***** and use the **▲** or **▼** buttons to scroll through the unit selection list until the correct unit is displayed. Release the buttons. The display will now read selected unit e.g. **unit : °C**

3 Select SP1 (Main setpoint output device)

Note: Dual Relay and Dual SSd Output Options Models have their outputs pre-configured. Move to Step 4.

- Press and hold ***** and use the **▲** or **▼** buttons to select **SSd** or **rLY** as required. The controller will now read selected output device e.g. **SP1.d : SSd**

4 To enter initial configuration into controller memory

- Press and hold both **▲** and **▼** buttons for 3 seconds. The display will now read **ParK** and measured variable (temperature) (eg. 23) **ParK** is displayed because a setpoint has not yet been entered.
- To display setpoint Press and hold ***** The displays will now read **unit** (eg. **°C**) and **0**
- To enter setpoint Press and hold ***** and use **▲** button to increase or **▼** button to decrease the reading and scroll to required setpoint value. (The digit roll-over rate increases with time).

THE CONTROLLER IS NOW OPERATIONAL WITH FACTORY SETTINGS

Note: For precise control of an application the controller may need to be TUNED. Please see the following section on AUTOTUNE

AUTOTUNE

This is a single shot procedure to match a controller to the process. Select either **Tune** or **Tune at Setpoint** from the criteria below.

The **Tune** program should be used when the load temperature is at or near ambient. The procedure will apply disturbances when the temperature reaches 75% of the setpoint value, causing overshoot which is monitored in order to adjust

SECOND SETPOINT (SP2)**SECOND SETPOINT (SP2) Alarm Output**

Configure SP2 output to operate as an alarm from **SP2.A** in Level 2 and set the temperature alarm setting in **Set.2** Level 1. The alarm will be triggered when the process temperature changes according to the options listed below.

dV.hi	Rises above the main setpoint by the value inserted at Set.2 .
dV.lo	Falls below the main setpoint by the value inserted at Set.2 .
bAnd	Rises above or falls below the main setpoint by the value inserted at Set.2 .
FS.hi	Rises above the main setpoint by a Set.2 value that is greater than the setpoint.
FS.lo	Falls below the main setpoint by a Set.2 value that is smaller than the setpoint.

SUBSIDIARY SP2 MODE

The following additional alarm functions can be added to the above alarm configurations using the features found in **SP2.b** in Level 2

LtCh	Once activated, the alarms will latch and can be manually reset when the alarm condition has been removed.
Hold	This prevents any alarm operation on power-up and is automatically disabled once the process reaches setpoint in order to allow normal alarm operation.
Lt.ho	Combines the effects of both LtCh & Hold and can be applied

SECOND SETPOINT (SP2) Proportional control output

Configure in **Level 1** using **Cyc.2** to select proportional cycle time and **bnd.2** to adjust proportioning band.

For Heat/Cool operation see full operating manual.

In on/off mode, **bnd.2** adjusts SP2 hysteresis.

SP2 OUTPUT AND LED INDICATION STATES - IN ALARM CONDITION

Alarm Type	ON-OFF Operating mode	Proportional Operating mode	Legend
Deviation	SP2 Output State	SP2 LED State	Output ON (relay or ssd energised)
dU.hi	SP2 Output State	SP2 LED State	bAnd : on-off mode only
dU.lo	SP2 Output State	SP2 LED State	
bAnd	SP2 Output State	SP2 LED State	
Full scale	SP2 Output State	SP2 LED State	Output OFF (relay or ssd de-energised)
FS.hi	SP2 Output State	SP2 LED State	
FS.lo	SP2 Output State	SP2 LED State	
cool	Temperature above setpoint	SP2 LED State	LED ON
Strategy	SP2 Output State	SP2 LED State	

SP2 ALARM ANNUNCIATOR

When an SP2 alarm mode is selected in SP2.A the alarm annunciator **-AL** is displayed, alternating with the process temperature, during alarm condition.

Notes: The alarm will be automatically reset when the temperature returns within the **bnd.2** setting in Level 1.

The annunciator may be disabled by selecting function **no.AL : on** in level 4.

SP2 in cool strategy See full operating manual (ADVANCED SETTINGS)

ERROR MESSAGES

Display Flashes	Fault Type	Action
inPt : FAIL	SENSOR FAULT Thermocouple burnout RTD/Pt100 open or short circuit or negative over-range.	Check sensor/wiring
dATA : FAIL	NON-VOLATILE MEMORY ERROR	De-power briefly. Replace unit if problem persists
hAnd : FAIL	MANUAL POWER ERROR SP1 set to ON/OFF in CYC.t	Select proportional mode
tunE : FAIL	IMMEDIATE FAIL ON AUTOTUNE START Note: To reset and clear error press ▲▼ together briefly to cancel message.	1. If display setpoint=0 then enter setpoint 2. If SP1 set to ON/OFF in CYC.t then select proportional mode
	FAIL LATER DURING AUTOTUNE CYCLE The thermal characteristics of the load exceed the autotune algorithm limits. The failure point is indicated by any display 0.0 in tech e.g. Ctb = 0.0	1. Change conditions: eg. raise setpoint 2. Try tunE : At.SP 3. If the error message persists, call local CAL representative for advice.

FUNCTION LIST (LEVELS 1 TO 4) - LEVEL 1

Function	Options [Factory settings] shown in brackets	Description
Select Autotune		
tunE	[off], on, ParK , At.SP	Used to switch the Autotune feature on and off, to select ParK or tune at setpoint. ParK temporarily turns the output(s) off. To use select ParK and exit program mode. To disable re-enter program at tunE and select off .
SP1 Operating Parameters		
bAnd	0.1 to * °C/F [10°C/18°F]	SP1 proportional band/Gain or Hysteresis * 25% sensor maximum Proportional control eliminates the cycling of on-off control. Heater power is reduced, by time proportioning action, across the proportional band.
int.t	oFF , 0.1 to 60 minutes [5.0]	SP1 integral time/reset Auto-corrects proportional control offset error
dEr.t	oFF 1 - 200 seconds [25]	SP1 derive time/rate Suppresses overshoot and speeds response to disturbances
dAC	0.5 - 5.0 x bAnd [1.5]	SP1 derivative approach control dAC Tunes warm-up characteristics, independent of normal operating conditions, by controlling when derivative action starts during warm-up (smaller dAC value = nearer setpoint).
Cyc.t	A --, on. oF , 0.1 - 81 sec [20]	SP1 proportional cycle-time (see section above) Determines the cycle rate of the output device for proportional control. Select on.oF for ON/OFF mode.
oFSt	[0] to * °C/F	SP1 offset/manual reset * ±50% bAnd . Applicable in proportional and ON/OFF mode with integral disable: Int.t : oF .
SP1.K	[off] on	Lock main setpoint Locks the setpoint preventing unauthorised adjustment.
Programmer Settings		
SPrr	[0] to 9995 deg/hour	Sets the ramp rate
SPrn	on [off] hold	Switches the ramp on or off, or hold at last ramp value
SoAK --	[off] 0 to 1440 min	Sets the soak time
SP2 Operating Parameters		
Set.2	0 to * °C/F [0]	Adjust SP2 setpoint * Deviation Alarms DV.hi, DV.lo, bAnd 25% sensor maximum. * Full scale alarms FS.hi, FS.lo sensor range f/s
bnd.2	0.1 - * °C/F [2.0 °C/3.6°F]	Adjust SP2 hysteresis or proportional band/gain (see Cyc.2 setting) * 25% of sensor full scale
Cyc.2	[on.oFF] 0.1-81 seconds	Select SP2 ON/OFF or proportional cycle-time Select on.oFF for ON/OFF mode, or the cycle rate of SP2 output device for proportional mode.

LEVEL 2

Function	Options [Factory settings] shown in brackets	Description
Manual Control Modes		
SP1.P	0 to 100 % 'read only'	Read SP1 output percentage power
hAnd	[off] 1 to 100 % (not in ON/OFF)	SP1 manual percentage power control For manual control should a sensor fail. Record typical SP1.P values beforehand.
PL.1	100 to 0 % duty cycle [100]	Set SP1 power limit percentage Limits maximum SP1 heating power during warm-up and in proportional band.
PL.2	100 to 0 % duty cycle [100]	Set SP2 percentage power limit (cooling)
SP2 Operating Modes		
SP2.A	[none] dV.hi dV.lo bAnd FS.hi FS.lo Cool	Main SP2 operating mode
SP2.b	[none] LtCh hoLd nLin	Subsidiary SP2 mode: latch/sequence ,Non-linear cool proportional band
Input Selection and Ranging		
d1.SP	[1] 0.1	Select display resolution: for display of process temperature, setpoint, OFSt , Set.2 , hi.SC , Lo.SC
hi.SC	sensor minimum [sensor maximum] °C/F	Set full scale
Lo.SC	[sensor minimum] sensor maximum °C/F	Set scale minimum (default 0°C or 32°F)
inPt	[nonE]	Select input sensor (See SENSOR SELECTION table)
Unit	[nonE] °C °F bAr Psi Ph rh Set	Select °C/F or process units

LEVEL 3

Function	Options [Factory settings] shown in brackets	Description
Output Configuration		
Note: 'Read only' after initial configuration. rSET ALL full reset to factory settings required to change SP1.d subsequently.		
SP1.d	[nonE] rLY Ssd1 rLY1 rLY2 SSd1	Select SP1 output device Dual Relay and Dual SSd output options are factory set.
SP2.d	[nonE] Ssd1 rLY rLY2 rLY1 SSd2	Read SP2 output device (read only) Dual Relay and Dual SSd output options are factory set.
For SP1.d & SP2.d		
Note: (when in initial configuration only) Hold * and ▲ or ▼ for 10 seconds to move to or from output options shaded.		
burn	SP1 / SP2 [uP.SC] Upscale/Upscale dn.SC Downscale/Downscale 1u.2d Upscale/Downscale 1d.2u Downscale/Upscale	Sensor burn-out/break protection Caution: Settings affect fail safe state.
rEu.d	SP1 / SP2 [1r.2d] Reverse Direct 1d.2d Direct 1r.2r Reverse 1d.2r Direct Reverse	Select output modes: Direct/Reverse Select Reverse on SP1 for heating and Direct for cooling applications. Caution: Settings affect fail safe state.
rEu.L	SP1 / SP2 [1n.2n] Normal Normal 1i.2n Invert Normal 1i.2i Normal Invert Invert	Select SP1/2 LED indicator modes
SPAn	[0.0] to ±25% sensor maximum	Sensor span adjust For recalibrating to align readings with another instrument e.g. External Meter, data logger. See Full Operating Manual (ADVANCED SETTINGS).
Zero	[0.0] to ±25% sensor f/s	Zero sensor error (see Sensor span adjust above).
ChEK	[off] on	Select control accuracy monitor
rEAD	[Var] hi Lo	Read control accuracy monitor
tECH	[Ct1 A] Ct7 b Ct1 Ct2 Ct3 Ct4 4 oS 1 uoS 2	Read Autotune tuning cycle data (see Operating Manual)
UEr		Software version number
rSET	[nonE] ALL	Resets all functions to factory settings Caution: This selection will lose all of the current settings.

LEVEL 1**PROGRAM ENTRY****LEVEL C****KEY * ▲ TO CHANGE LEVELS OR OPTIONS****KEY ▲ OR ▼ TO VIEW FUNCTIONS****KEY ▲ OR ▼ TO VIEW FUNCTIONS**