


FLOW INDICATOR

Rhythmic rising and falling indicates positive flow. Air bubbles indicate chemical has exhausted. Stationary ball indicates no flow. Problem could be: lost prime, stopped motor, plugged injection fitting, faulty tube or diaphragm, plugged or dirty footvalve filter or chemical has been exhausted for a lengthy period of time.

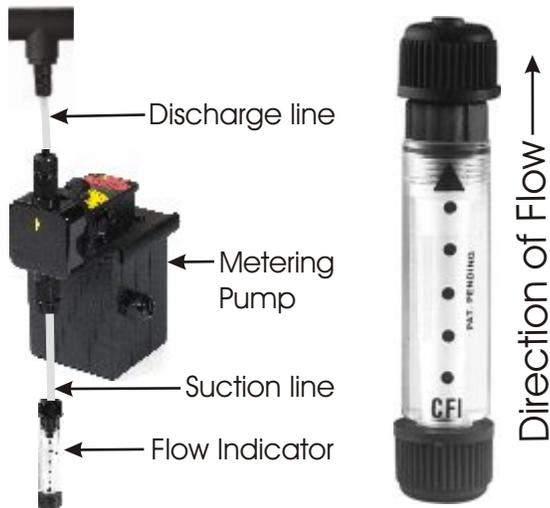


Blue-White
Industries, Ltd.

80000-034

FLOW INDICATOR

Rhythmic rising and falling indicates positive flow. Air bubbles indicate chemical has exhausted. Stationary ball indicates no flow. Problem could be: lost prime, stopped motor, plugged injection fitting, faulty tube or diaphragm, plugged or dirty footvalve filter or chemical has been exhausted for a lengthy period of time.

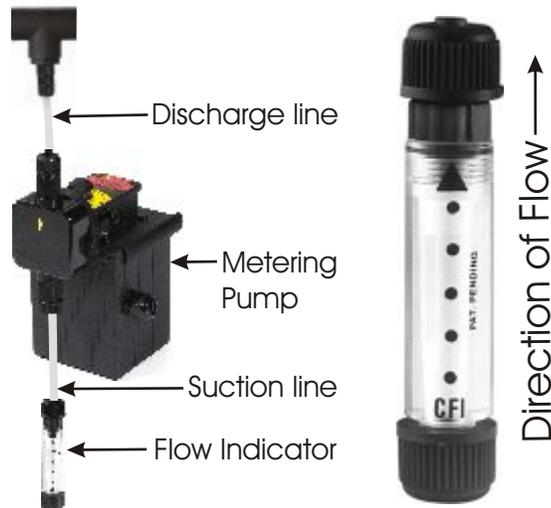


Blue-White
Industries, Ltd.

80000-034

FLOW INDICATOR

Rhythmic rising and falling indicates positive flow. Air bubbles indicate chemical has exhausted. Stationary ball indicates no flow. Problem could be: lost prime, stopped motor, plugged injection fitting, faulty tube or diaphragm, plugged or dirty footvalve filter or chemical has been exhausted for a lengthy period of time.

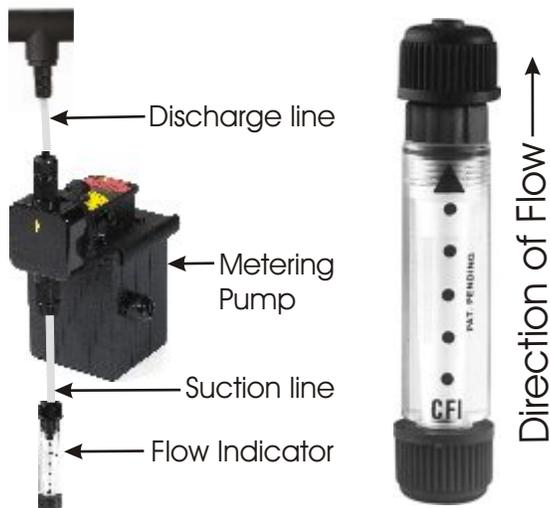


Blue-White
Industries, Ltd.

80000-034

FLOW INDICATOR

Rhythmic rising and falling indicates positive flow. Air bubbles indicate chemical has exhausted. Stationary ball indicates no flow. Problem could be: lost prime, stopped motor, plugged injection fitting, faulty tube or diaphragm, plugged or dirty footvalve filter or chemical has been exhausted for a lengthy period of time.

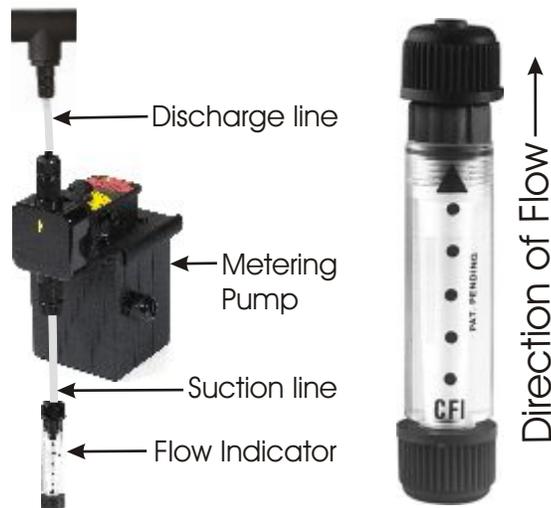

Blue-White
Industries, Ltd.

80000-034